



HYAZ™ Inkjet Media

Photo Glossy Self Adhesive Paper

Printing and Application Instructions

- 1) Copy/Print on to the coated side of the media using a compatible Inkjet Printer.
- 2) To prevent a paper jam, make sure the paper/film is not bent or warped or corners folded BEFORE loading. Loading by hand ONE SHEET at the time (pressing FF/Ready) is a way to make sure it loads correctly.
- 3) When gluing self adhesive media to any surface, clean the surface and remove residual grease, soot or dust.
- 4) It is not recommended (on larger labels like 11" X 17") to remove all the back paper before installing. It's better to remove the paper from a small area at one end first such as a 1/2" vertical strip at the left hand or right hand edge.
- 5) Line up your label. When the position looks correct, let the label make contact with the surface on the edge where you removed the back paper.

Item#	PGA8511G 10 sheets pack
Media	Self Adhesive Glossy Paper
Media Type	Inkjet
Color	White Glossy
Printers	Most Desk Top
Type of Adhesive	Permanent

6) Now bend the label back and carefully remove the rest of the protective back paper, and glue the label down working from the end you glued first. Then work your way towards the other end holding that end away from the surface. You can use your finger or sponge and only press down (glue) a small area each time to prevent trapping air bubbles. Do not use excessive pressure when working the label in this way because you may smudge the ink.

NOT FOR OUTDOOR USE.

Try also our other Inkjet Media.

General: If you working with 4.25" x 11" label you can try removing all the backing material and then apply using the technique described here above.

NOTE: If using self adhesive media the adhesive will become permanent over time. If you want to use self adhesive media on automobiles or other items where you don't want the label to become permanent then we recommend our selection of media with removable adhesive. To extend UV resistant of Inkjet media HPS offers over-laminate with built in UV barrier.

Printer Settings

If your printer is not listed here then select glossy paper and high resolution.



CANON 600 SERIES Media Choice: High Res. Paper Print Quality: Photographic Print Normal Resolution	CANON 4000 SERIES Media Choice: High Res. Paper Quality: Photographic Resolution: Standard	EPSON PHOTO EX & PHOTO 700 Media Type: 360 dpi Ink Jet Paper Print Quality: Photo	EPSON 400, 600, 700, 800, 1520, 3000, 5000 SERIES & STYLUS PHOTO Media Type: 360 dpi Ink Jet Paper Print Quality: Photo	EPSON 400, 600, 700, 800, 1520, 3000, 5000 SERIES & STYLUS PHOTO Media Type: 360 dpi Ink Jet Paper Print Quality: Photo	HEWLETT PACKARD 600, 700, 800, 1000 & PHOTOSMART PRINTERS Media Type: Premium Ink Jet Paper Print Quality: Normal
---	--	---	---	---	---

HPS PO Box 1507
Lake Dallas TX 75065
E-mail: sales@papilio.com

For complete updated list of our media and to order on line go to
WWW.PAPILIO.COM or call 940-497-1717

Disclaimer: We have tested our media in various personal inkjet printers with good results. The user of this paper/film must determine the suitability of this product before beginning production, using his equipment and method of application. The sellers and manufactures maximum obligation shall be to replace paper/film that has been found to be defective. Neither the manufacturer nor the seller shall be held liable for any injury, direct or consequential, arising out of the use of, or inability to use this paper/film.